



500/600 Series Installation Guide

Revision 2.0
July, 2011

Disclaimer:

The specifications in this document are subject to change without notice.
All trademarks mentioned in this document are the property of their respective owners,
and are used herein for informational purposes only.

© 2011 Quantum Scientific Imaging
Phone 888-QSI-4CCD • www.QSIimaging.com

Table of Contents

1. INSTALL QSI SOFTWARE & DRIVERS	
<i>System requirements:</i>	1
<i>Run the QSI Installer</i>	2
2. CONNECT THE CAMERA	
<i>Windows 7, Vista or XP Installation</i>	6
3. INSTALL MAXIM	
<i>Run the Maxim LE Installer</i>	9
<i>Install Maxim QSI Plug-in (all versions)</i>	9
4. INSTALL OPTIONAL SOFTWARE	
<i>Install the Software Bisque CCDSoft Plug-in:</i>	13
<i>Install the AstroArt Plug-in</i>	13
<i>Install Acrobat Reader</i>	15
<i>Other Software Options</i>	16
<i>Installation Complete</i>	16
A P P E N D I C E S	
<i>Appendix A - Windows 2000 Installation (Obsolete)</i>	17
<i>Appendix B - Troubleshooting</i>	18
<i>Technical support</i>	19

Install QSI Software & Drivers

NOTE: The USB drivers and associated software included on the installation CD must be installed before connecting the QSI camera to your computer. If you wish to use the camera with multiple computers, the USB camera driver and software installation must be completed on each computer.

Do not connect your camera to your computer until instructed to do so in the camera software installation process.

System requirements:

- Pentium compatible PC running Windows 7, Windows Vista, Windows® XP SP2 or above.
- Available USB 2.0 or USB 1.1 port
- 1 GB recommended (256 MB minimum)
- 20 MB disk space for installation
- 1024x768 display recommended (800x600 minimum), 24-bit color recommended (8-bit minimum for monochrome images only)
- CD-ROM drive
- Internet Explorer 6 or higher to display Help

If you choose to use your existing copy of MaxIm DL, it must be revision 4.56 or higher.

If you choose to use Software Bisque CCDSoft, it must be revision 5.00.175 or above.

Run the QSI Installer

Start your computer and login as a user with Administrator rights.

Insert the QSI Installation CD into the CD-ROM drive on your computer. The QSI Camera Installation program should auto-run and display the installation menu.

Note: Windows 7 and Vista users –

Windows 7 and Vista have additional security measures to reduce the chances for drivers or software to be installed without your express permission. Please see the “Quick Start Guide” enclosed with your camera or on the installation CD for additional details.

If User Account Control (UAC) is enabled on your computer you may see additional dialog boxes confirming that you wish to install the software. If you see any User Account Control dialog boxes, click “OK” or “Continue” as necessary to allow the installer to run.

Note: If you have an older system that does not have the ATL 3.0 library DLL (from Microsoft) installed, you will be prompted to install it prior to seeing the menu below. ATL 3.0 is a shared system library the installer uses to install the software on your system. It is a standard Windows DLL and is included on the QSI Installation CD for your convenience.

If the installation program does not auto-run, run the program "Menu.exe" in the root directory of the CDROM to launch the installer.


Install the QSI camera software on to your system. Click "**Install Drivers and Plug-ins**" to go to the installation menu.




Click "Install Camera Software and Drivers" to begin the setup of the QSI drivers and support software.




The QSI Camera Software setup program starts. Click "Next".

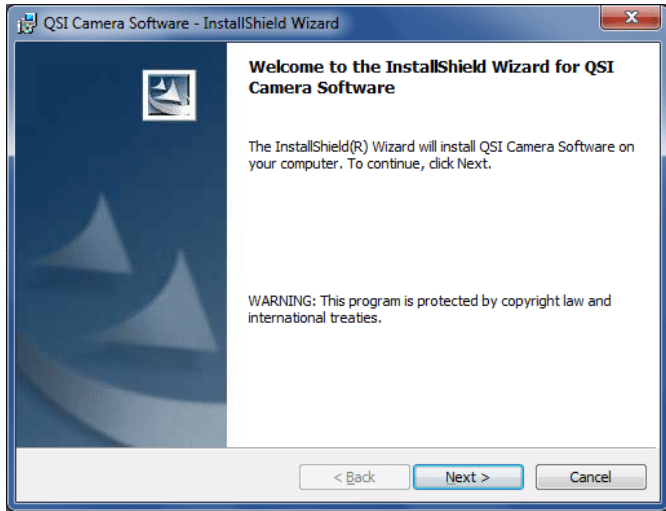


You must agree to the license agreement to proceed with the installation. Click on the radio button next to "I Accept..." and then click "Next".

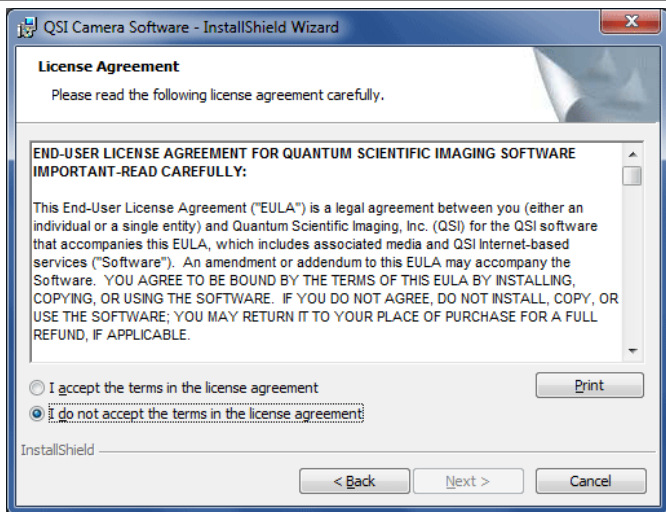

Enter your name and organization. Select either the "Anyone who uses this computer" (recommended) or "Only for me" then click "Next".

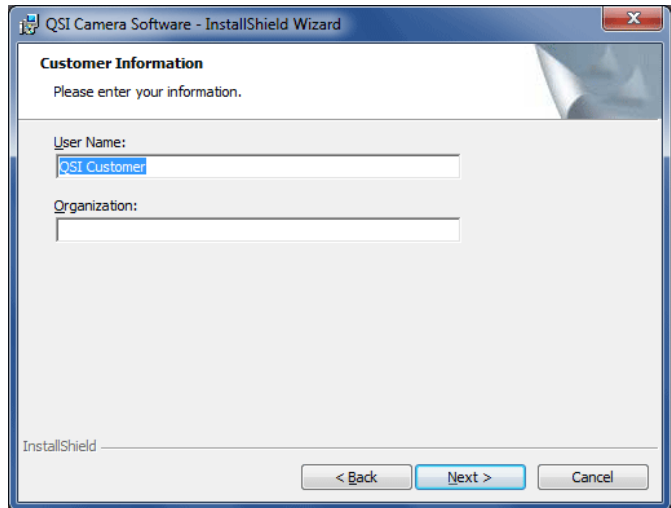


Click "Install" to begin the software installation.

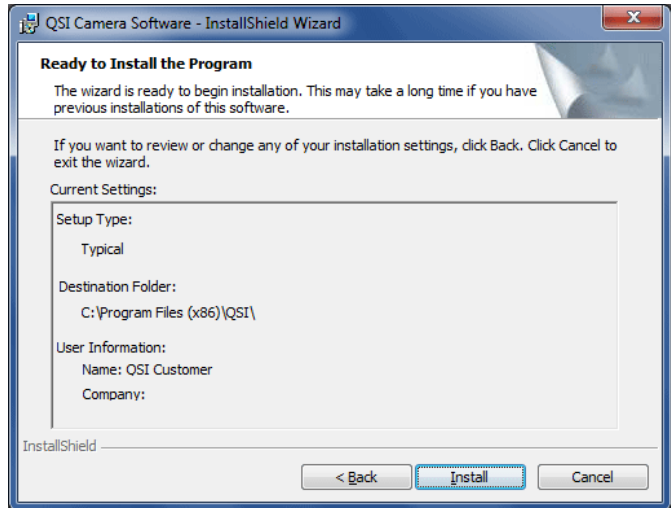


If Windows is configured to provide a warning about unsigned drivers (the default Windows behavior), you will see a dialog similar to the one to the right:

Click "Yes" or "Continue Anyway" to proceed with the driver installation. If you have turned off unsigned driver warnings, you will not see this dialog.

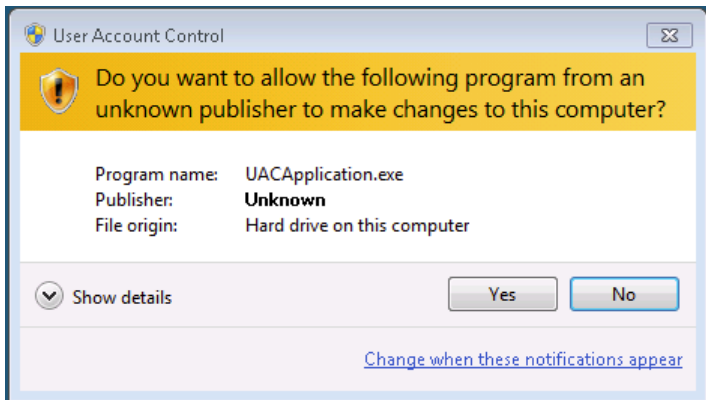

When the installation process completes, click **"Finish"**.

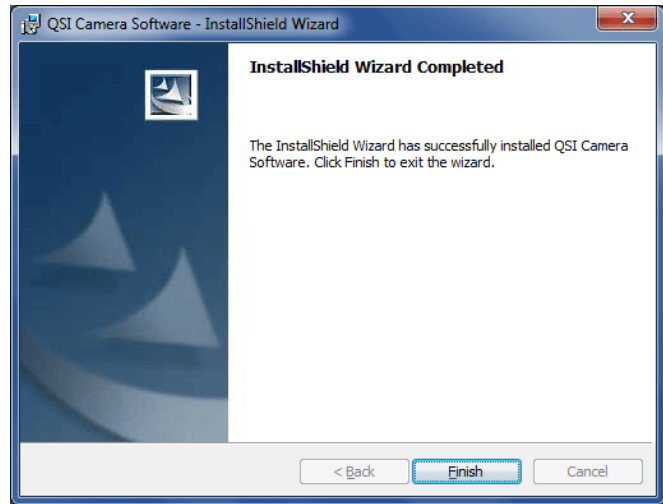

You will be returned to the Install QSI Camera Software and Drivers Installation window.

On earlier versions of the installer a green check mark may be displayed next to "Install Camera Software" indicating that you have completed this step.



Continue with **Section 2 Connect Your Camera.**

Connect Your Camera

This section describes the Plug and Play installation of your QSI camera when running Windows 7, Vista or XP. Dialog boxes and screen shots may look different depending on your version of Windows. See **Appendix A** for Windows 2000 instructions.

Windows 7, Vista or XP Installation

The Found New Hardware Wizard should be used to install drivers for your QSI Camera when it is connected to your computer for the first time.

Note: You must install the QSI camera software as shown in Section 1 *Install QSI Software & Drivers* before proceeding with this section.

Note: Refer to the **QSI 500/600 Series User Guide** for complete instructions on connecting your camera to your telescope.

Attach the power supply to the camera

The camera will power up and run its internal diagnostics. When the camera completes its startup process, the status LED on the back of the camera will flash green.

Connect the camera to an unused USB port on your computer


Windows will detect the camera and display the Found New Hardware alert along the Task Bar near the bottom of your display.



The Windows Found New Hardware Wizard will start and may ask if you want to connect to Windows Update. Click “No, not this time” and then Click “Next”.



Click “Install the software automatically” and then click “Next”.

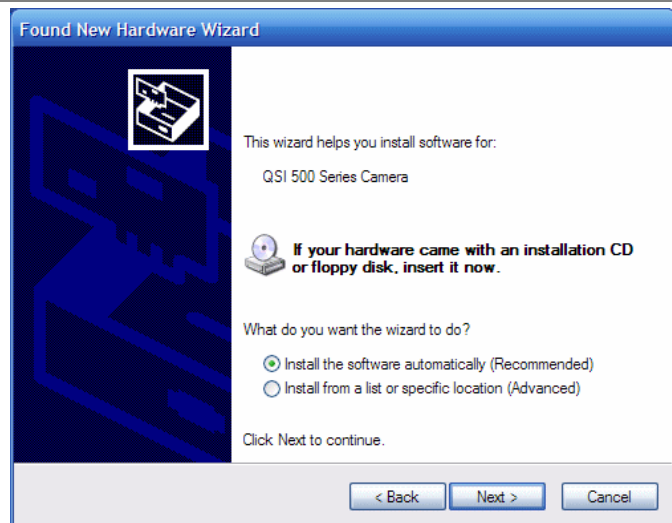


If Windows is configured to provide a warning about unsigned drivers (the default Windows behavior), you will see a dialog box similar to the one to the right.

Click “Yes” or “Continue Anyway”




QSI 500 SERIES INSTALLATION GUIDE

Windows installs the QSI 500/600 Series Camera driver.

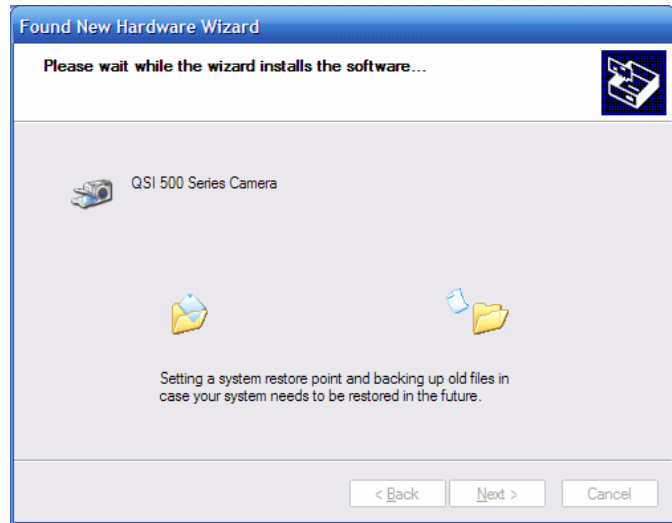

When the installation process completes, click "**Finish**".

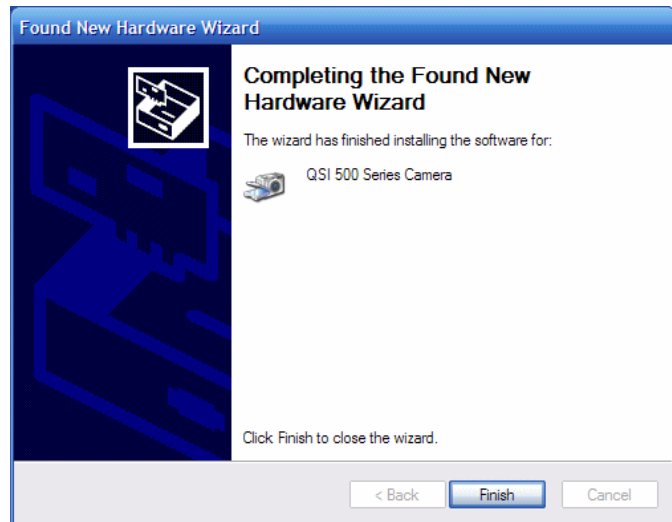

Once the installation is complete, the status LED on the back of the camera should show a steady green indication. The camera is now ready for use. Proceed with the following sections to install any additional software you wish to use.

Install MaxIm

Run the MaxIm LE Installer

If you purchased a license for MaxIm LE to control your QSI camera, click "Install MaxIm LE" and follow the MaxIm setup dialogs to complete the MaxIm LE installation. After you complete the MaxIm LE installation, proceed to the MaxIm plug-in installation.



Install MaxIm QSI Plug-in (all versions)


Once you have completed the installation of MaxIm LE, or if you already have MaxIm DL installed, you must now install the MaxIm QSI plug-in to allow MaxIm to communicate with your QSI Camera.

Note: If you have multiple installations of MaxIm, the plug-in must be installed separately for each MaxIm installation. The installer for the MaxIm DL plug-in will try to locate and automatically install the plug-in for all versions installed on your computer, but if you have installed MaxIm in a non-standard location, the Installer may not be able to find some of the MaxIm installation directories. Choose the appropriate folder for each MaxIm installation.

Click "Install MaxIm QSI Plug-In" to begin the plug-in installation




The QSI MaxIm Plug-in setup dialog will be displayed. Click "Next".

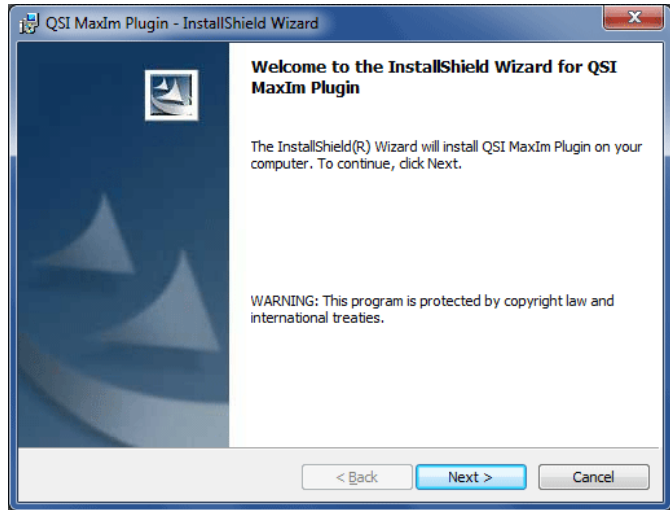


You must agree to the license terms to install the plug-in.

Click the radio button next to "I Accept..." and then click "Next".

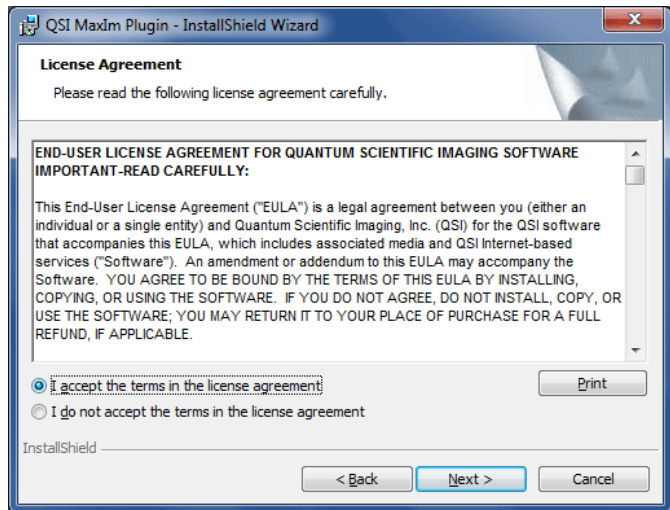


Enter your name and organization. Select either the "Anyone who uses this computer" (recommended) or "Only for me" then click **"Next"**.

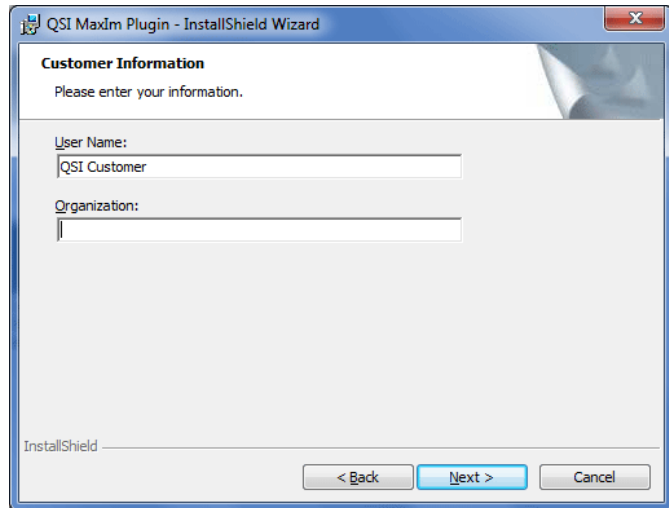


Select the folder(s) where MaxIm is installed.

If you have MaxIm LE, MaxIm DL v4 and/or MaxIm DL v5 installed, the installer will try to identify and install the plug-in for each version automatically.


If you wish to install the plug-in in a custom location click "Change..." otherwise click **"Next"**.

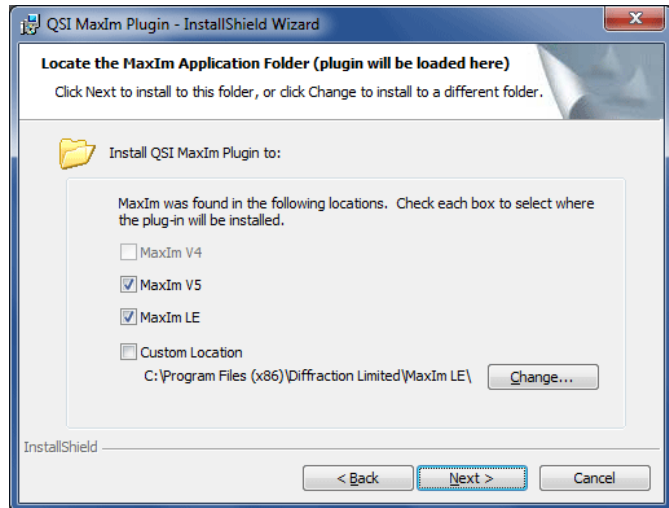

Click **"Install"** to install the MaxIm plug-in.

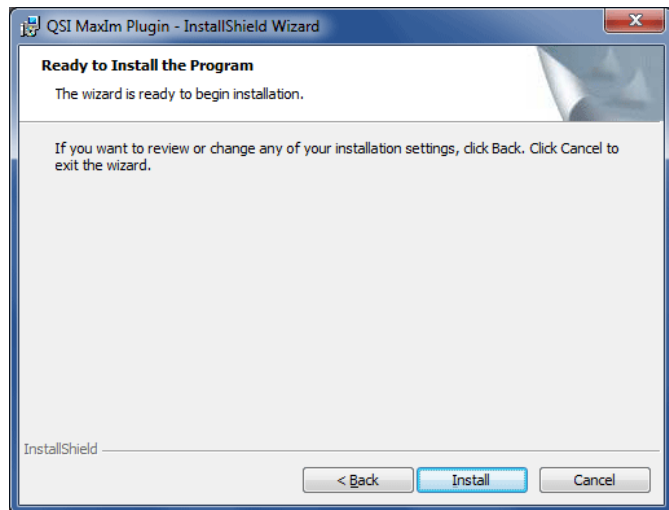

When the installation completes click "**Finish**".

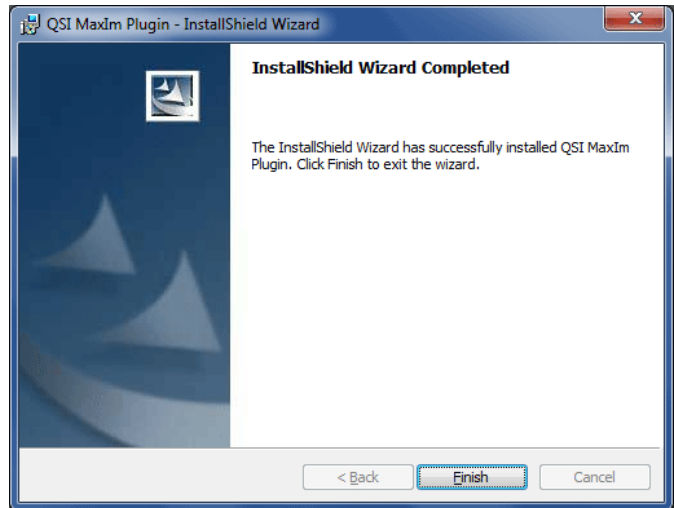

You will be returned to the Install QSI Camera Software and Drivers Installation window.



Unless you wish to install the QSI camera plug-in for CCDSOFT, AstroArt or Adobe Acrobat Reader, you're done. Click "**Main Menu**" to return to the main installer screen and then click "**Exit**" to exit the installer.

Continue with the **Getting Started** section in the **QSI 500/600 Series User Guide**. Open the User Guide by clicking the Windows Start button and select Programs > QSI > 500/600 Series User Guide

To install optional software, continue with **Section 4 Install Optional Software**.

Section
4

Install Optional Software

Install the Software Bisque CCDSoft Plug-in

Note: If you have multiple installations of CCDSoft, you must install the plug-in separately for each CCDSoft installation, choosing the appropriate installation folder for each CCDSoft installation.

If you own CCDSoft from Software Bisque and wish to use it with your QSI camera, install the CCDSoft plug-in by clicking "Install CCDSoft Plug-In".



Click "Next".



You must agree to the license terms to install the plug-in.


Click the radio button next to "I Accept..." and then click "Next".




Enter your name and organization. Select either the "Anyone who uses this computer" (recommended) or "Only for me" then click "Next".




Select the folder where CCDSoft is installed. The installer should display the correct folder. If you wish to change this folder click "Change..." otherwise click "Next".

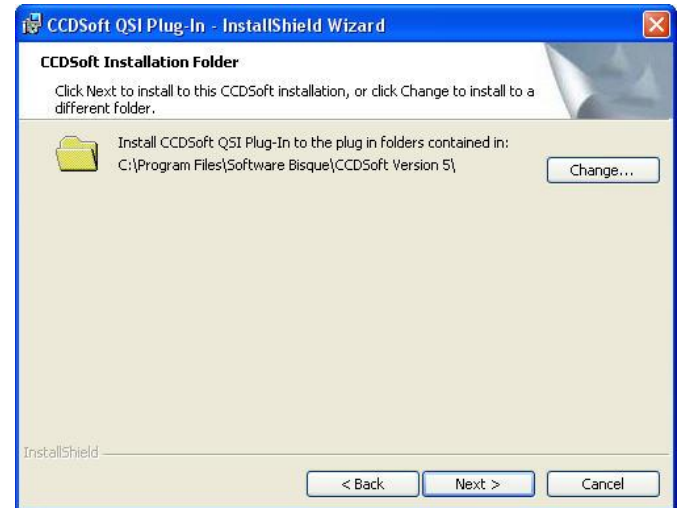

Click "**Install**" to begin the installation.

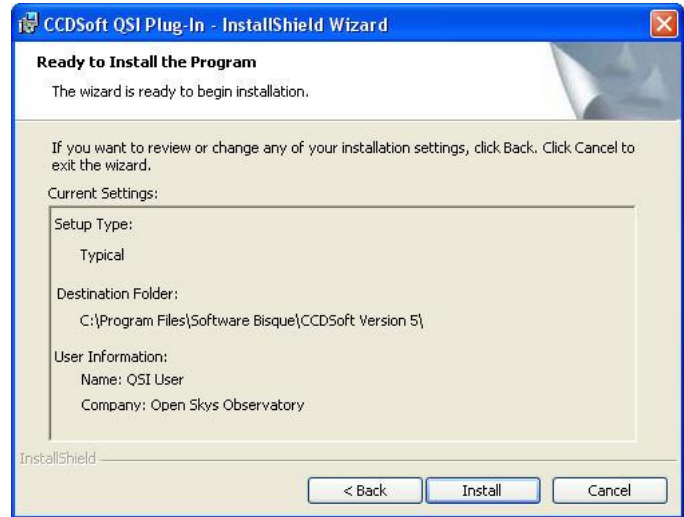

When the installation completes click "**Finish**".

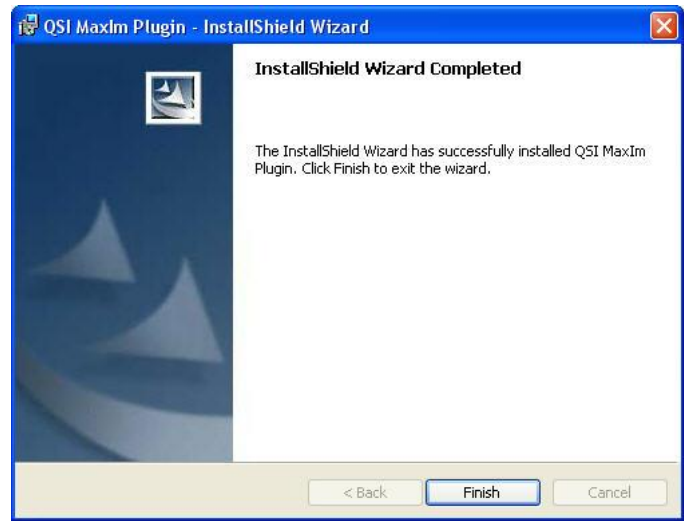

Install AstroArt Plug-in

If you wish to install the optional AstroArt Plug-in, return to the Install QSI 500 Series Camera Software window. Click "**Install AstroArt QSI Plug-in**" Follow the on-screen instructions.

Install Acrobat Reader

If you wish to install the optional Adobe Acrobat Reader, return to the Install QSI 500 Series Camera Software window. Click "**Install Acrobat Reader**" Follow the on-screen instructions.

Other Software Options

Other software options are available on the QSI web site. Click "**Other Software Options**" to open a browser window and go to the QSI Software page.

Installation Complete

Congratulations! You've successfully installed your QSI camera. Click "**Main Menu**" to return to the main installer screen and then click "**Exit**" to exit the installer.

Continue with the **Getting Started** section in the **QSI 500/600 Series User Guide**.
Open the User Guide by clicking the Windows Start button and select
Programs > QSI > 500/600 Series User Guide

Appendix A

Windows 2000 Installation (Obsolete)


Note: Windows 2000 is no longer supported by QSI. Microsoft ended support for Windows 2000 in July, 2010. The following section is maintained in this manual only for compatibility with earlier software releases

Under Windows 2000, the Found New Hardware Wizard should be used to install the camera when it is connected to your computer for the first time.

Note: You must install the QSI camera software as shown in Section 1 Install QSI Software & Drivers before proceeding with this section.

Installing QSI USB Drivers

After installing the QSI camera software, connect the camera to an open USB port on your computer.

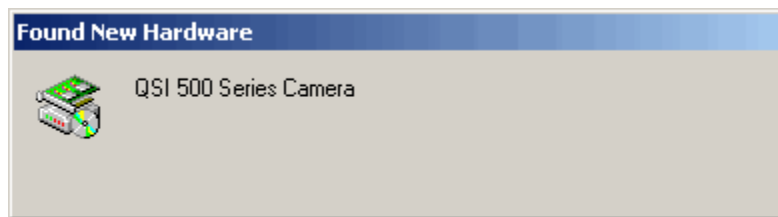


Windows will launch the Found New Hardware Wizard. The driver will be installed with no further user action required

Appendix B

Troubleshooting

Windows displays an error and then terminates installation

If the following dialog box is displayed, your version of Windows has been configured to block the installation of any drivers that are not WHQL certified.

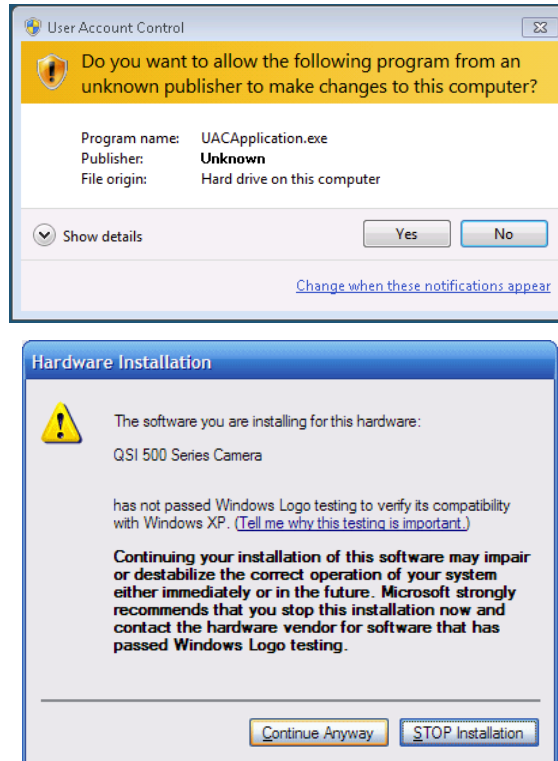

Click "Yes" or "Continue Anyway" to proceed with the installation. To change the current driver signing setting, go to "Control Panel > System", click the "Hardware" tab and then click "Driver Signing". Click "Warn..." or "Ignore..." and then click "OK". The installation will now be able to complete normally.

Can't connect to the QSI camera after installing on Windows Vista and Windows 7

The QSI installer must be run with Administrator rights. Windows 7 and Vista have additional security measures to reduce the chances for drivers or software to be installed without your express permission. Even if logged in as a user with Administrator privileges, programs may not automatically run with Administrator rights. If you can't communicate with your QSI camera after installing on Vista, uninstall the drivers, and rerun the Installer by opening the root directory of the QSI release CD, right-click on the file "Menu.exe" and select, "Run as Administrator" from the pop-up menu. Then follow the standard installation instructions.

Technical support

Most technical support questions can be answered 24 hours a day using the support section of the QSI web site at <http://www.qsimaging.com/support.html>. There you will find online help and instruction manuals, technical articles and a searchable knowledge base with answers to common questions. If you can't find the answer to your question on our web site please contact QSI technical support at shown below. Email is preferred.

Internet	http://www.qsimaging.com/support.html
Email	support@qsimaging.com
Phone	888-774-4223